



AQ Guard, currently the most advanced compact analyzer for determining indoor air quality, continuously and reliably analyses airborne fine dust particles in the range $0.175 - 20 \mu\text{m}$ (*¹ IAHP-Package starting from $0.15 \mu\text{m}$). A newly developed mass conversion algorithm calculates PM values based on single particle optical light scattering, considering signal duration and shape.

AQ Guard simultaneously calculates and stores PM_1 , $\text{PM}_{2.5}$, PM_4 , and PM_{10} , the total dust load, the particle number concentration CN, and the particle size distribution. Thus, AQ Guard provides comprehensive, accurate information on indoor particulate matter. This is only possible in this form with a counting single particle measurement method.

OPERATION PRINCIPLE

INDOOR AIR QUALITY

The system works on the single particle's 90-degree scattered light measurement principle, considering signal duration and shape. Technology and algorithms were developed based on the EN 16450-certified Fidas® 200. With additional sensors for CO_2 and volatile organic hydrocarbons (TVOC), AQ Guard determines the data required to determine the air quality index (AQI).

The combined measurement of CO_2 content and particle size distribution also allows conclusions to be drawn about air contamination by human germs and particles. In indoor areas, it is thus possible to determine what proportion of the air has been exhaled and therefore contains potentially infectious particles. This type of measurement data evaluation represents a new dimension in indoor air quality assessment and is available in AQ Guard as an "infection risk index" (patent pending).

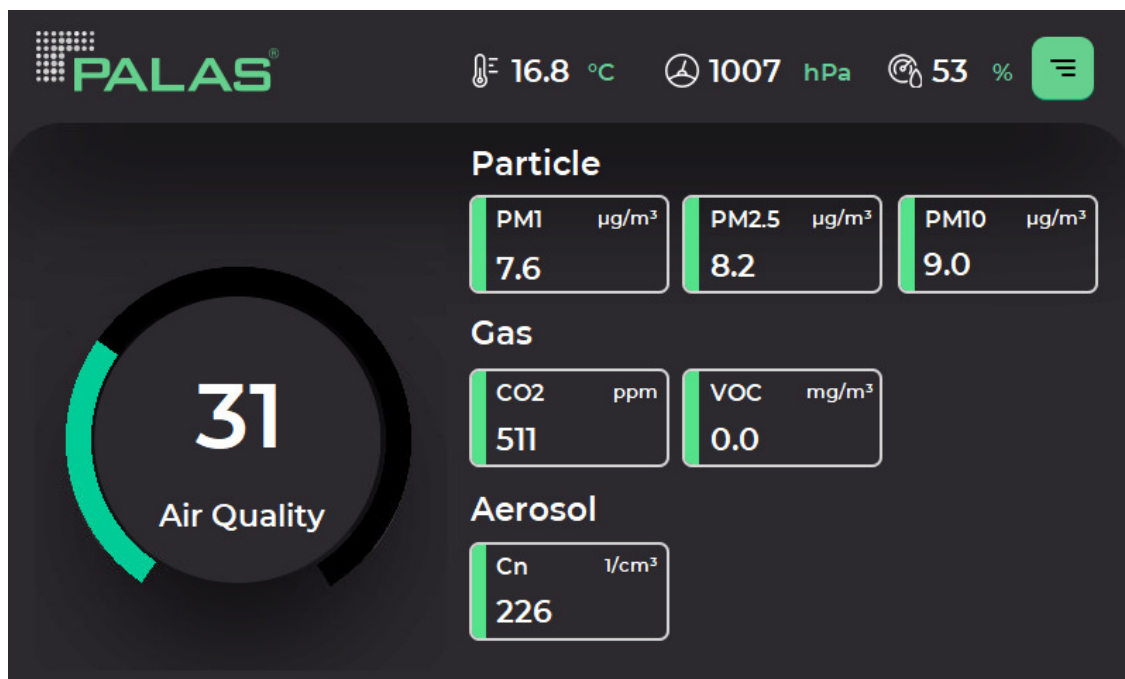


Fig. 1: AQ Guard screen view

Improved efficiency allows more accurate measurement of minute particle concentration and concentration trend over time.

AQ Guard has fast data interfaces, allowing real-time Ethernet (PoE), Wi-Fi, or cellular access. All measured values are calculated and made available directly on the device. The user thus retains complete control over his data and decides which information is accessible to third parties or should be transmitted. AQ Guard continues to provide data in various formats (such as a text file) for later evaluation.

Comparison measurements

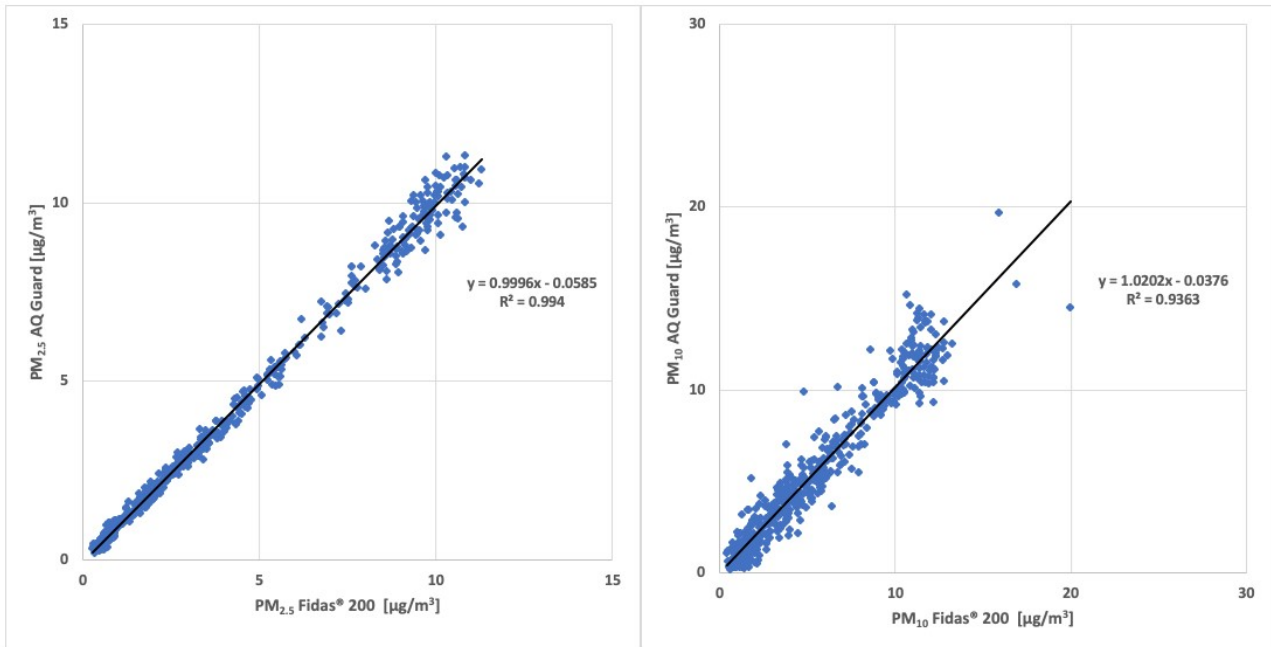


Fig. 2: Comparison of data recorded by AQ Guard and Fidas® 200 S

The high correlation values of the AQ Guard to the reference Fidas® 200 confirm the comparability of both systems.

Extensions/Accessories

AQ Guard has fast data interfaces, allowing real-time Ethernet, Wi-Fi, or mobile radio access. All measured values are calculated and made available directly on the device. The user thus retains complete control over his data and decides which information is accessible to third parties or should be transmitted. AQ Guard provides data in various formats (such as a text file) for later evaluation.

The compact design and the option of power supply via the Ethernet interface (PoE) simplify installation in buildings and integration into existing infrastructure.

AQ Guard is available in two expansion stages:

Basic version

The basic version of AQ Guard provides measured values of the fine dust fraction PM_{2.5} plus other variables such as temperature, air pressure, and relative humidity.

The extension "Indoor Air Hygiene Professional (IAHP)"

Compared to the basic version, the measurement limit for small particles has been extended downwards to 0.15 µm to meet the unique requirements for detecting airborne viruses.

The "Indoor Air Hygiene Professional" package is designed to meet the requirements of experts in indoor air and air hygiene and, among other things, determines values of the fine dust fractions PM₁, PM₄, and PM₁₀, including particle size distribution and number concentration of particles.

AQ Control - Software for assessing the air hygiene quality of rooms

The AQ Control software¹ can assess the dispersion and reduction of aerosols in rooms. Up to six AQ Guard systems and an aerosol generator PAG 1000 measure the accumulation, reduction of particle concentrations, and PM values over an adjustable period and objectively assess actions taken to reduce aerosol and, thus also, potential virus contamination.

(Software AQControl is part of the "Indoor Air Hygiene Professional (IAHP)" package)

¹<https://www.palas.de/en/product/AQControl>: <https://www.palas.de/en//en/product/AQControl>

BENEFITS

- Technology based on the type approved Fidas® 200 series (EN16450 and MCERTS); simultaneous measurement of C_N, PM₁, PM_{2.5}, PM₄, PM₁₀
- With the "Indoor Air Hygiene Professional" extension: increased counting efficiency for nano-scaled particles from 0.15 μm
- Computation of air quality index based on measurements of particulates, CO₂, and VOC
- Estimation of infection risk based on measurements of CO₂ and particulate matter
- High accuracy due to advanced algorithms
- Long term stable due to self-calibration for measurement of flow rate, particulates, and gaseous pollutants
- Two years operation without calibration
- Operates on AC, DC, or power-over-Ethernet

DATASHEET

Measurement range (number C_N)	0 – 20,000 particles/cm ³
Size channels	64 (32/decade)
Measurement range (size)	0.175 – 20 μm (with IAHP-Package installed, starting from 0.150 μm)
Measuring principle	Optical light scattering at single particles
Reported data	PM ₁ , PM _{2.5} , PM ₄ , PM ₁₀ , TSP, C_N , particle size distribution, ambient pressure, ambient temperature, rel. ambient humidity, CO ₂ , TVOC, Infection Risk Index, Air Quality Index (depending on configuration)
Measurement range (mass)	0 – 20,000 $\mu\text{g}/\text{m}^3$
Measurement uncertainty	R ₂ > 0.98 for PM _{2.5} and R ₂ > 0.94 for PM ₁₀ versus EN 16450-certified Fidas® 200 (15 min average, each)
Volume flow	1 l/min $\hat{=} 0.06 \text{ m}^3/\text{h}$
Data acquisition	Digital, 22 MHz processor, 256 raw data channels
Light source	Long term stable LED
Power consumption	< 20 W
User interface	Touchscreen, 800 • 480 pixel, 5" (12.7 cm)
Weight	2.4 kg
Operating system	Windows 10 IoT Enterprise
Data logger storage	10 GB
Software	PDAnalyze
Response time	1 s, moving average configurable
Aerosol conditioning	Optional: thermal with compact IADS
Installation conditions	-20 – +50 °C
Interfaces	USB, Ethernet (LAN), Wi-Fi, optional: 4G
Protocols	UDP, ASCII
Dimensions	175 • 280 • 140 mm (H • W • D)
Linearity	0.95 – 1.05 (measured against EN 16450 certified Fidas® 200)

CASE STUDIES

- Industry: production processes, bulk material handling (mixing, discharge, storage, packaging, etc.), fence-line monitoring
- Construction sites: roads, railroads, demolition sites
- Buildings: schools, kindergartens, hospitals, hotels, offices, public service buildings,
- Residential buildings near construction sites or other polluted areas
- Public transportation: airports, train stations, tramway underground stations, cruise ships, passenger cabins, e.g., in trams, train



Mehr Informationen:
<https://www.palas.de/product/aq-guard>